


- Raw Material unloading Flow
1. Unload the Tray from the Iyomax30.0.
 2. Move the tray to the powder turn around and broken system.
 3. Broken the powder plate.
 4. The powder send to the mill through vacuum.
 5. The powder after mill send to the mixer through vacuum.
 6. the powder send to the filler after mixing
 7. fill into the alu tin.

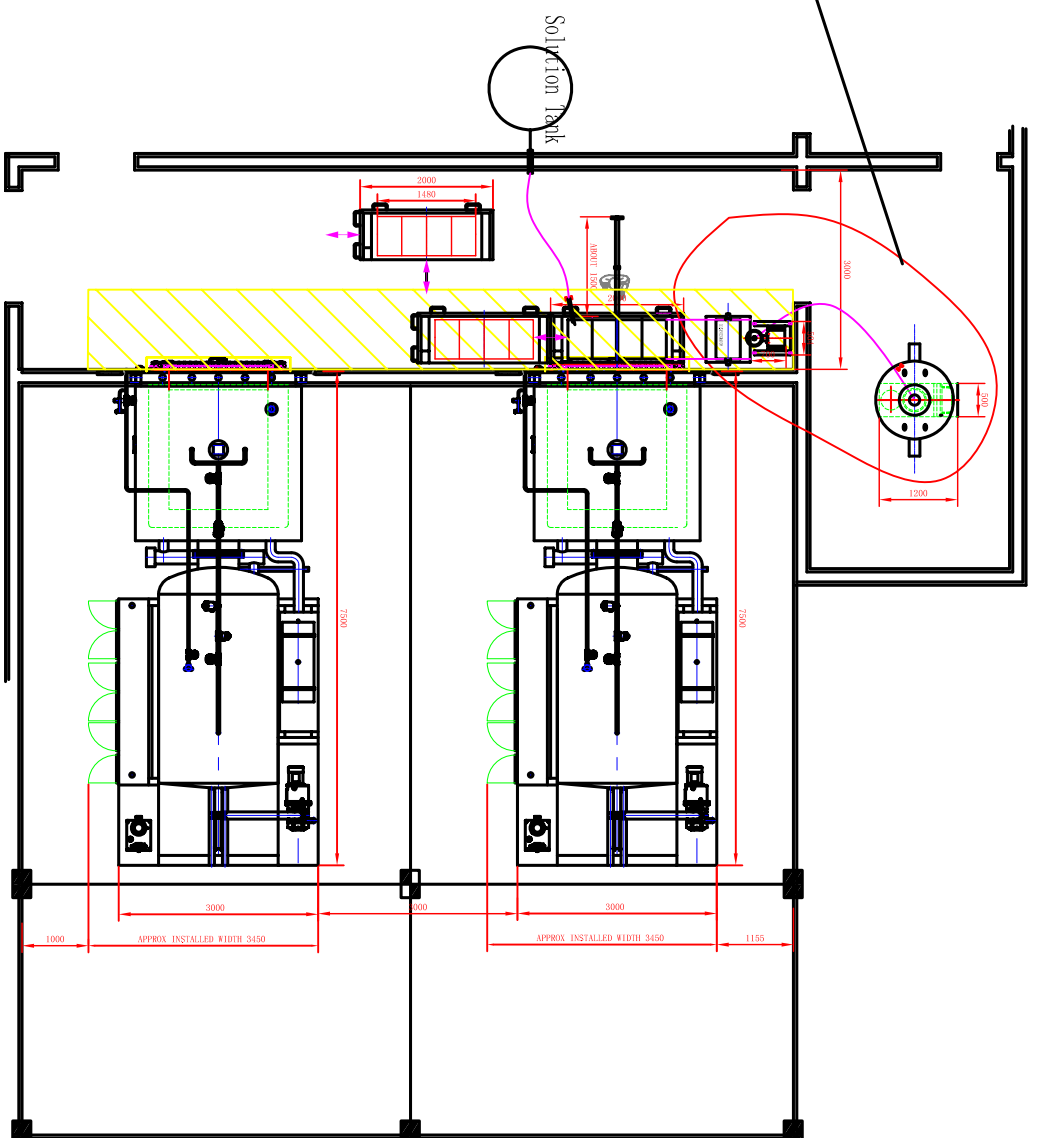

- Raw Material Loading Flow
1. Load the Tray into the Movable trolley.
 2. Move the trolley to the Iyomax30.0
 3. Connect the trolley with the loading platform.
 4. Fill the solution into the tray.
 5. Connect the loading plate with the shelf of the Iyomax30.0.
 6. Push the trays into the Iyomax30.0
 7. Pull out the tray after drying.