



PHARMA DEVILS

**DESIGN QUALIFICATION
DOCUMENT
FOR
HVAC BMS**

PROTOCOL No.:

**DESIGN QUALIFICATION
FOR
NIYAMA HVAC BMS**



PHARMA DEVILS

**DESIGN QUALIFICATION
DOCUMENT
FOR
HVAC BMS**

PROTOCOL No.:

TABLE OF CONTENT

| Index | Description | Pg.No. |
|--------------|--|---------------|
| 1 | Introduction | 4 |
| 2 | Summary Sheet | 5 |
| 3 | User Requirement Specification | 5 |
| 4 | Objective and Scope Of The Work | 8 |
| | 4.1 Scope Of Work | 9 |
| | 4.2 Requirements For Environment and Operation | 10 |
| 5 | Scheme & System Description and Design | 12 |
| | 5.1 System Description : NIYAMA-HVAC BMS | 12 |
| | 5.2 Operation Of NIYAMA | 13 |
| | 5.3 NIYAMA-HVAC BMS Software | 14 |
| 6 | Module Specification | 15 |
| 7 | Validation And Other Control Testing Measures | 17 |
| 8 | 8.1 NIYAMA - HVAC BMS Software catalogue | 17 |
| | 8.2 Module's prominent features | 21 |
| | 8.3 Appendix | 22 |
| 9 | Final Report | 23 |
| 10 | Design Qualification Report Approval | 24 |
| 11 | Glossary & Abbreviations | 25 |



PHARMA DEVILS

DESIGN QUALIFICATION DOCUMENT FOR HVAC BMS

PROTOCOL No.:

1. INTRODUCTION

Description of Document:

This document provides Documented Evidence for **HVAC BMS** supplied. This system will provide facility monitoring.

The Scope of Design Qualification document is to ensure that **HVAC BMS** meets the desired specifications as required.

2. SUMMARY SHEET

Description of Equipment: **BMS**

Scope Covered By System:

- Wired Control panels
- CFM, RH and Temperature sensors
- Display Panel With inbuilt Alarm Indication
- HVAC BMS software
- Controlling & Monitoring of Temperature, Humidity and CFM

3. USER REQUIREMENT SPECIFICATION (URS)

1.1. PARAMETERS TO BE MONITORED (FOR RESPECTIVE AHUs):

| S.No. | Parameters | Limit As Per Design | Remark |
|--------------|-------------------|-------------------------------------|-----------------|
| 1. | CFM | CFM is Based on Delta P | Digital out put |
| 2. | Temperature | -40 to +125 °C with 2 decimal point | Digital out put |
| 3. | Relative Humidity | 0 to 100% with 2 decimal point | Digital out put |



PHARMA DEVILS

DESIGN QUALIFICATION DOCUMENT FOR HVAC BMS

PROTOCOL No.:

1.2. USER POINT DETAILS: (AHU's & Areas)

| Device ID NO. | Serial No. | Location Details | Device Connected |
|---------------|------------|------------------|------------------|
| 1 | | | DDC Controller |
| 2 | | | DDC Controller |
| 3 | | | DDC Controller |
| 4 | | | DDC Controller |
| 5 | | | DDC Controller |
| 6 | | | DDC Controller |

➤ **THIS ABOVE PARAMETERS PERFORMANCE IS SUBJECT TO FOLLOWING:**

Instructions as mentioned in System Performance Warranty are followed.

- Preventive maintenance should be carried out as per requirement.
- Process Areas are operated as per given defined parameters and limits for HVAC System.
- Continues ups power supply to all the modules.

4. OBJECTIVE AND SCOPE OF THE WORK

➤ **Purpose:**

The purpose of this document is to state the necessities of **HVAC BMS**. Descriptions are given in terms of general functions, procedure and capacity. Requirements are defined as paragraphs to facilitate DQ, IQ, OQ and PQ. Purpose of this document is to provide detailed Technical information of supplied system.

4.1 SCOPE OF WORK:

➤ **Description:**

The **NIYAMA HVAC BMS** is designed for continuous data logging, monitoring and controlling of defined Parameters (Temperature, Humidity, CFM).



PHARMA DEVILS

DESIGN QUALIFICATION DOCUMENT FOR HVAC BMS

PROTOCOL No.:

- Proper documentation, including SOP's and periodical reports of all logs and alarms and excursions. (All Software related alarms are as per process related alarms limits (As per defined SOP)).
- Process area and AHU have to be equipped with multiple sensors spread evenly throughout the controlled area.
- Continuous recording of data with accuracy of 21 CFR part 11 Compliance supported by Audit trail and history report.
- Auto Corrective action taken, when defined set parameters go outside the specifications.

➤ **Alarms and Excursions**

Niyama HVAC BMS is designed with identification of abnormality which is as below mentioned.

- Start Alarming, if monitored values go outside a predefined value.
- Proposed adequate controlled output from controllers to achieve parameters(Temperature ,Humidity ,CFM)
- Alarms on excursion conditions being breached (usually a set temperature, Humidity and differential pressure for a particular time)
- Recovery of Alarms and Acknowledgment with action taken.

➤ **Scope of work**

Shree Aerodynamic Products, Ahmedabad (India) scope of work includes:

- Supply of Total system according to specification
- Installation of Modules having
 - ▣ CFM sensor (Based on ΔP) (factory calibrated) with digital output
 - ▣ Differential Pressure sensor (factory calibrated) with digital output
 - ▣ Temperature sensor (factory calibrated) with digital output.
 - ▣ Relative Humidity sensor (factory calibrated) with digital output.



PHARMA DEVILS

DESIGN QUALIFICATION DOCUMENT FOR HVAC BMS

PROTOCOL No.:

- Installation, Start-Up and performance test at Site.
- Documentation (DQ, IQ and support to OQ & PQ)
- Training shall be given to all the concern persons

4.2 REQUIREMENTS FOR ENVIRONMENT AND OPERATION

Layout:

The **HVAC BMS** shall be installed at concerned end for display & monitored by Authorised person online.

Physical conditions & Area classification:

System is intended for indoor application. For AHU's CFM, Temperature and Humidity needs to be monitored and maintained.

UTILITIES

Utility requirements are for the efficient operation of environment Monitoring.

| Utilities | Description | Remark |
|--|---|--------------------------------|
| Personal computer, For data logging & monitoring | Intel Core i5 Processor, 16 GB RAM Minimum, Ubuntu OS, 1TB Hard Drive, USB support | User's scope |
| Printer | Any printer. | User's scope |
| Power | 230 V, 1-phase, 50 Hz. Continues ups power supply | User's scope |
| User | All the user list with Email ids | Name and in ascending form. |



PHARMA DEVILS

**DESIGN QUALIFICATION
DOCUMENT
FOR
HVAC BMS**

PROTOCOL No.:

5. SCHEME & SYSTEM DESCRIPTION & DESIGN

5.1 SYSTEM DESCRIPTION: HVAC BMS

The **HVAC BMS** encompasses state-of-the-art technology with the vision of monitoring and controlling AHU parameters within the Concord environment where accurate temperature, humidity and CFM monitoring and controlling are essential. Niyama HVAC BMS supplied by **Shree Aerodynamic Products** having following basic components:

- Our modules in Ms powder Coated Control panel with necessary control outputs supply and CFM , Temperature ,Humidity Sensors and Real-time Display Console with Alert Indications
- Communication card for PC
- HVAC BMS software

Distinctive Features

- Data monitoring, logging and notification using central base receiver.
- The Internet- and web-enabled remote diagnostics and maintenance
- Controlled access to **HVAC BMS software** based on allocated user privileges.
- Display current temperature ,humidity ,CFM Initiates alarm as per defined parameter limits for each parameters
- Real time monitoring, logging and reporting.
- Best-in-class data analysis tools, including ability to graph and report in standard and user-defined formats.
- Wired module connections to the central computer system.
- Modules are scalable and easy to integrate for fast time-to-market applications.



PHARMA DEVILS

DESIGN QUALIFICATION DOCUMENT FOR HVAC BMS

PROTOCOL No.:


5.2 OPERATION OF NIYAMA



The **HVAC BMS** consist module, based on receiver and centralized main computer with **HVAC BMS software**.

Each individual module is fully expandable to meet custom requirement of monitoring and controlling based on different AHUs application and specifications.

Modules (nodes) can be connected in multiples with wire to a central monitoring, logging and configuration system operating on a server, facility

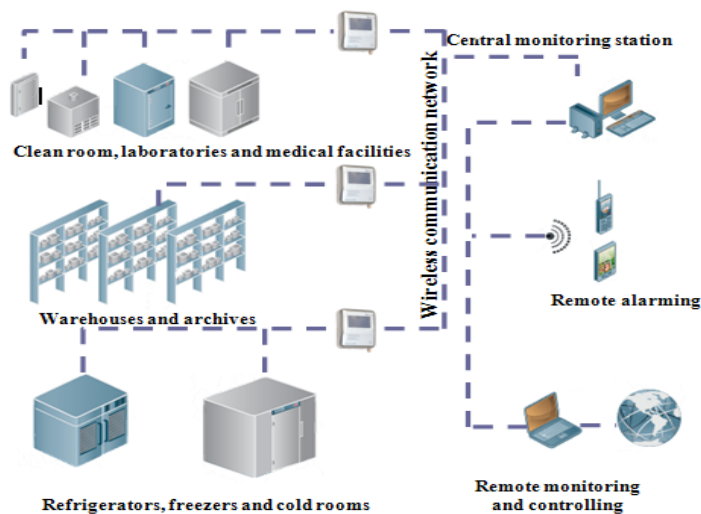

monitoring system combines efficient monitoring and controlling with effective alarming, simplified reporting and secure data records & storage.

5.3 HVAC BMS SOFTWARE

Series is the online Monitoring system with **HVAC BMS** software support which uses the very latest technology to fully automate temperature, Relative



PHARMA DEVILS

DESIGN QUALIFICATION DOCUMENT FOR HVAC BMS

PROTOCOL No.:

Humidity and Pressure monitoring and recording 24/7 providing effective control over different parameters.

PRODUCTS has designed and developed the **HVAC BMS software** that shows all parameter values on the PC monitor screen and keep updating and storing them in the computer as per preset time intervals.

It generates log report on bases of time, date and year that can be seen in graphs, tabular reports in PDF form. Data is stored as per pre-defined time interval. Reports are of events based likewise generated errors, modified set values of parameters, email notifications, etc. The software is easy to use and enables real time display, mimic chart, immediate visual display of data (current and historical) in graphical and printable form.

The **HVAC BMS software**, provided with all products, allows to set parameter values, take an action in correspond to out of range value of environmental parameters then generate control output as per the algorithms.

HVAC BMS software exhibit current, minimum and maximum range of all parameters and activates a settable high/low alarm for each parameter. If parameters go high or low, it gives alarm indications

6. MODULE SPECIFICATIONS

- Body: Ms powder Coated Panels
- Dimensions: 820 mm x 771 mm x 220.22 mm
- Weight: 50 Kg Approx.

Common feature for Differential Pressure, Temperature and Rh sensor:

- Digital signal quality
- Fast response time
- Insensitivity to external disturbances
- Overall temperature accuracy is ± 0.5 °C
- Tiny size and ultra low power consumption





PHARMA DEVILS

DESIGN QUALIFICATION DOCUMENT FOR HVAC BMS



PROTOCOL No.:

- Highest reliability and excellent long term stability.

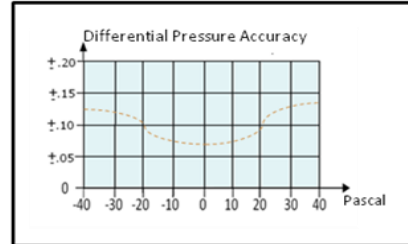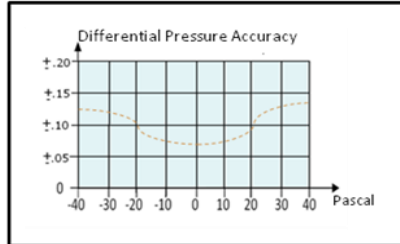

Accuracy at different Temperature:

- $\pm 0.5^{\circ}\text{C}$, range 0°C to $+40^{\circ}\text{C}$
- $\pm 1.0^{\circ}\text{C}$ range $+40$ to $+70^{\circ}\text{C}$
- $\pm 1.5^{\circ}\text{C}$ range $+70$ to 100°C

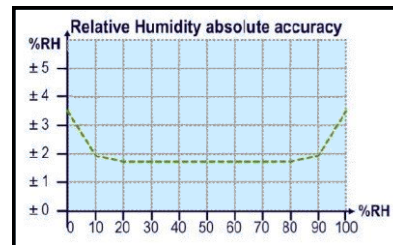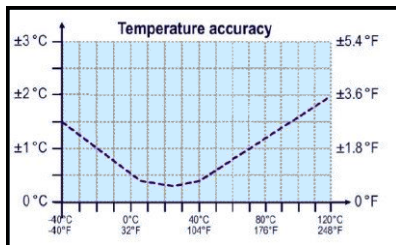

Accuracy at
different
Differential
Pressure:

- ± 0.15 , range -345 to $+345$ Pascal

Accuracy at different Relative Humidity:

- $\pm 3.0\%$ RH, RH range 0 to 90%
- $\pm 3.5\%$ RH, RH range 0 to 10%
- $\pm 3.5\%$ RH, RH range 90 to 100%

➤ **DISPATCH**



PHARMA DEVILS

DESIGN QUALIFICATION DOCUMENT FOR HVAC BMS

PROTOCOL No.:

All Factory manufactured instruments will be cleaned inside and outside and dried before packing for dispatch. All end connections shall be sealed before packing for dispatch.

➤ **CALIBRATION:**

All instruments will be provided with Factory Calibration sensors and Will be in compliance to EQDC Certificate.

7. VALIDATION AND OTHER CONTROL TESTING MEASURES:

- **INSTALLATION CHECK:**

An installation checklist shall be performed before Installation Qualification to ensure that the all instruments have been installed so that IQ can be performed successfully.

8.1 HVAC BMS Software catalogue

HVAC BMS Software is being designed to combine regulatory demands and industries norms for AHU facility. System is the on-line Monitoring system with *HVAC BMS* software support which uses the very latest technology to fully automate process variables such as temperature, relative humidity and pressure.

Accurate Monitoring

HVAC BMS offers a large array of choices for monitoring the Process area. With the use of **HVAC BMS**.

- Information can be monitored locally, centrally and remotely.
- Access to the system is protected. Each user is assigned with username and password to gain access to functionality, defined by their access level.



PHARMA DEVILS

DESIGN QUALIFICATION DOCUMENT FOR HVAC BMS

PROTOCOL No.:

- Plant information is supervised through standard and custom displays and includes:
 - Real Time Display
- Data collected from every module are linked together and displayed as trends using online and historical trending within the system. Trended data are available in various groups (Temperature, Humidity. & CFM.)

The monitoring facility also provides the user with access to standard features of the system according to their access level, including:

- Trends
- Alarm set point configuration
- Control parameter configuration

Data Logging, alarming and reporting

Data logging is a key requirement for *HVAC BMS*. 21 CFR Part 11 requires that logged data will be tamper proof subject to NDA this includes critical facility parameters (temperature, humidity, CFM, and etc.), with audit trails including:

- Accurate time and date stamps
- Alarms and events
- User actions and details (e.g. set point changes as per defined Level of user level) (User Levels are administrator, supervisor, operator)
- User notes
- Login/Logout/Auto Timeout Session

Typically a system comprises of a number of distributed modules where module has its own internal clock. Time synchronization is included to ensure accurate time and date stamps, as required by 21 CFR Part 11, to a known clock source.



PHARMA DEVILS

DESIGN QUALIFICATION DOCUMENT FOR HVAC BMS

PROTOCOL No.:

The **HVAC BMS** system offers facility such that one can copy data electronically for archive and export them to common packages (e.g. PDF) for viewing of secure records in human readable format.

Alarms and Events Reporting

A key feature of the **HVAC BMS** is its Alarms and Events functionality. All alarms and events are time stamped and logged for long term retention and In compliance to 21 CFR Parts 11. Individual plant data can be configured to have one or a combination of the following alarms:

- Critical Alarm selection and set point settings with the appropriate user access level.
- Alarm acknowledgements are automatically logged as required by 21 CFR parts 11.
- All alarms and events are reported and displayed in the Alarm Summary report.
- Audible alarm notification
- Local printing of alarms and events.

Easy to Use, Comprehensive Reporting

The **HVAC BMS** system provides a comprehensive review and reporting system. The system offers two methods for collecting data

- Local data collection – Data collected locally in a secure format and archived centrally in a filing system
- Central data collection – Data collected in a central server

In this way, the **HVAC BMS** provides the facility to create reports for individual rooms. Information gathered can be automatically transferred and accessed from users define OS

- Real-time and historical trends



PHARMA DEVILS

DESIGN QUALIFICATION DOCUMENT FOR HVAC BMS

PROTOCOL No.:

- Multiple data plots
- Trend analysis
- Standard and custom queries
- Quick report generation with standard templates

Easy to Operate at every Level

Security Manager: Security Manager offers significant operation cost savings and ease of use by allowing maintenance of user accounts and passwords from one or multiple locations. If a user needs to change their password they can do so on a local instrument or PC and this will be automatically distributed across all systems to which they have access.

- Change in one place, deploy to many
- Support for multiple security zones
- Built-in audit trail for 21 CFR Part 11

Remote Monitoring

With the use of **HVAC BMS**; remote users, including off-site, can access plant information via a secure web portal.

- Remote real-time data visualization
- Support for multiple windows
- Integrated information from diverse data sources

Validation

A key requirement for **HVAC BMS** solutions is validation. Where facility conditions (e.g. temperature, humidity, cfm etc) have a direct impact on product purity, safety, quality or efficiency they need to be monitored against predetermined limits and logged. In this case the system used for collecting and logging the data needs to be validated.



PHARMA DEVILS

DESIGN QUALIFICATION DOCUMENT FOR HVAC BMS

PROTOCOL No.:

8.2 Module's prominent features

- CFM, Pressure, Temperature and RH. Measurements in one.
- Big LCD display for local display of monitored values.
- Provides 100% guarantee of validation data delivery using factory calibrated measurement sensors.
- High and low alarm for upper and lower limit
- Dry contact or solid state alarm output (*Optional*)
- Alarm output can be used for simple ON/OFF control
- Visual and Audible alarm notification for operator attention
- User programmable display interval
- Real-time clock(*Optional*)
- Individual or centralized module data printing
- Serial communication
- Hard wired / wireless communication
- Potential free output for hooter
- User configurable High & Low alarms setup
- Real time display through software.

8.3 APPENDIX

| S.No. | Title | Checked By | Sign/Date |
|-------|----------------------|------------|-----------|
| 1. | Software user manual | | |
| 2. | | | |
| 3. | | | |
| 4. | | | |



PHARMA DEVILS

**DESIGN QUALIFICATION
DOCUMENT
FOR
HVAC BMS**

PROTOCOL No.:

9. FINAL REPORT

10. DESIGN QUALIFICATION REPORT APPROVAL:



PHARMA DEVILS

**DESIGN QUALIFICATION
DOCUMENT
FOR
HVAC BMS**

PROTOCOL No.:

11. GLOSSARY & ABBREVIATION

DPI Differential Pressure 1

TEMP Temperature

RH Relative Humidity

CC Change Control

CGMP Current Good Manufacturing Practice

DQ Design Qualification

FAT Factory Acceptance Tests

I/P Input

IQ Installation Qualification

MKT Mean kinetic Temperature

N/A Not Applicable

N/Av Not Available

NABL National Accreditation Board for Testing and Calibration Laboratories

NMT Not More Than

O/P Output

OQ Operational Qualification

P/N Part Number

PQ Performance Qualification

Qty Quantity

REV Revision

SAT Site Acceptance Test

SOP Statement of Purpose

Spec. Specifications

TS Technical Specifications

URS User Requirement Specification